


LED Curtain Light Instruction manual

Model	Voltage	LEDs/Set	Watt./Set	Max.connectable
CNLT2C-230V-W400-20-BK2.0M-10CM-WW	230V 50Hz	400	Max 35 W	5 sets
CNLT2C-230V-W300-20-BK2.0M-10CM-WW	230V 50Hz	300	Max 35 W	5 sets



--Product Structure

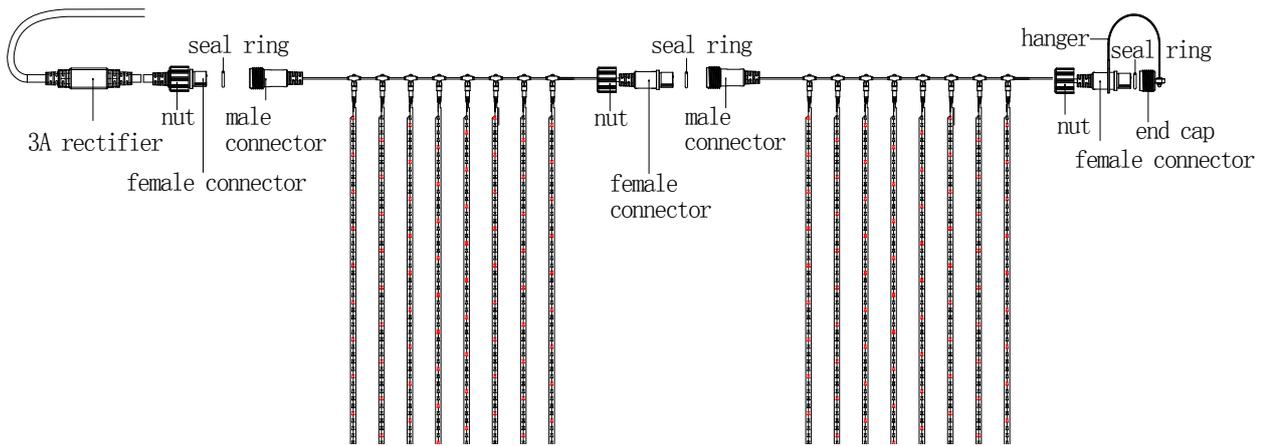

--Use of Connecting male and female connectors.

1. Put the male connector into anticlockwise the female connector. Carefully

2. Fasten the screw cap

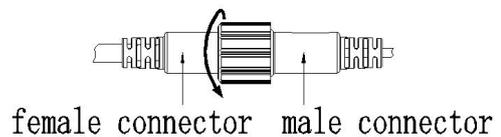
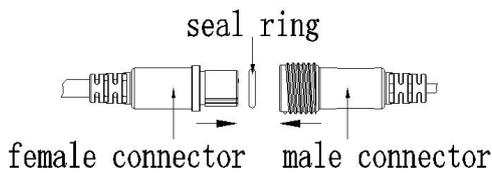


Caution: Make sure there is a seal ring between male and female connector. And the male pin must insert the bottom of female connector and fast the screw cap.

--Use of connecting female connector and end cap.

1. Insert the end cap into the female connector carefully.

2. Fasten the screw cap anticlockwise

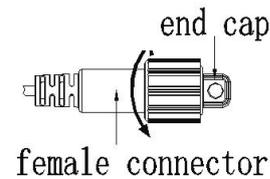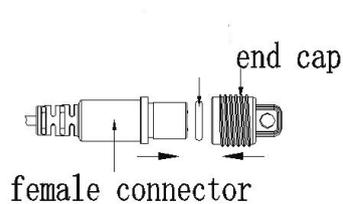

Caution: Make sure there is a seal ring between female connector and end cap. The screw cap must lock tightly. Push the provided shrink tube to ensure a safe connection for avoiding water come in.

--Warning and Precautions:

- 1.Should not be connected the light chain to the supply while it is in the package or in accumulation.
- 2.Should not be lighted while cable surface and lamp cover as well as other components are damaged.
- 3.Before lighting the product please make sure all the connecting ways are correct and health.
- 4.Never connect the product with any other electrical products.
- 5.Do not use metal wire to fix the light chain for avoiding damage the insulating barrier of light chain
- 6.Do not hang any decorative articles on the light chain.
- 7.Please make sure the connecting quantity not over the max. load quantity.
- 8.Only the same specification, same voltage light chain can connect together. Please make sure the connection firmly to avoid water come in.
- 9.Do not use the light chain in explosive and flammable environment.
- 10.Please connect the short-circuit protection when outdoor use.
- 11.The light chain is not a toy, please keep out of reach of small children.
- 12.Never move and decorate the light chain when it is switch on.
- 13.Please double check the product after a long time use or bad weather.
- 14.If this product is damaged please destroy.